Operating Instructions

Explosion-proof LED High Bay Fitting

ExDUEVO

Series nD8301/nD8302…

Adolf Schuch GmbH
Mainzer Str. 172 • D-67547 Worms
+49 6241 4091-0 • info@schuch.de
www.schuch.de



The safety of people and equipment in hazardous areas depends on the observance of all safety standards. Exact knowledge about all applicable regulations and standards is mandatory for installation maintenance and repair of explosion proof equipment, especially

- the determinations of IEC/EN 60079-14 and IEC/EN 60079-17 for maintenance of explosion-proof appliances
- the generally accepted rules of the technical side
- the national rules for prevention of accidents and for safety standards
- the safety instructions of these operating instructions
- the characteristic data on the type plate and the instruction plates

1. Safety Instructions

- The light fitting is suitable for indoor applications only.
- The light fitting must be selected in accordance with the specified protection rating and installed in compliance with the installation regulations.
- The light fitting must be protected against overvoltage, overcurrent, short circuits and other electrical failures and must be maintained in accordance with the applicable regulations.
- The light fitting must be operated in an undamaged condition only.
- The light fitting may only be opened if it has been disconnected from the mains supply completely.
- It is allowed to open the light fitting in a non-explosive (non hazardous) atmosphere only.
- The non-stationary use of the light fitting as well as any other inappropriate usage is prohibited.
- The operation of the light fitting is allowed within its assessment thresholds only.
- In regard to the minimum and maximum admissible ambient temperature potential sources of cold and heat (e.g. direct heat or solar radiation, cooling units) have to be considered.
- If the light fitting is subject to particular stresses - chemical, mechanical, thermal and electrical, as well as vibrations or moisture - prior consultation with Adolf Schuch GmbH is required.
- Every structural modification will cause dangerous situations and consequently the certification of this light fitting will be null and void.
- **The light fitting is not allowed to be installed in process areas where strong electrical fields may occur (i.e. HV Sparkling Electrodes or Particle Streams). Reason is to avoid any electrostatic charge of the light fitting itself.**
- The filling level of the connection cable should be quite high for avoiding any air penetrating the inside of the light fitting through the cable.
- The stated minimum distance between light fitting and illuminated objects must be observed.
- Applying an explosion-proof breathing gland for pressure compensation is not allowed.
- The supplied Y-ropes are made of galvanized steel and must therefore not be used in a corrosive environment.
- The fixation of the light fitting with Y-ropes is only permitted in the manner shown in section 3, Technical Data.
- Replace damaged parts by original spare parts from the Adolf Schuch GmbH only.
- LED-modules and control gears of this light fitting must be replaced by Adolf Schuch GmbH, by a service technician who is instructed from Schuch or by any other person with equivalent qualification only.
- It is not permitted to provide the light fitting with additional holes for fastening.
  If a standard version of the light fitting is to be retrofitted for fastening with Wall angle bracket, the additional holes required for this must be made by Adolf Schuch GmbH in order to guarantee the explosion protection of the light fitting.


2. Operating Advice

- Any application of the light fitting that is incorrect or even forbidden will lead to the fact that the manufacturer's warranty is lost.
- Opening the LED compartment is allowed for repair work only.
- LED are sensitive electronic components. Please ensure that the LED are protected against mechanical and electrostatic attacks whenever the light fitting is open. For this reason the LED must not be touched either.
- Due to harmful gases and other corrosive substances (e.g. ammoniac, sulphur- or chlorine compounds) it may come to damages of the LEDs. Depending on the substance, the concentration, the temperature and the dwell time, damages up to total black-out are possible. This may occur also to fittings with high degree of protection. The suitability of the light fitting for the respective application can only be checked by running a test at site.
- The light fitting has an additional Ex cable gland, which is locked by a closing plug and which is designed as a test port to run the test for restricted breathing (see section 5.3, Testing the restricted breathing).



- **The Ex cable gland with closing plug, which is designed as a test port, must not be used for cable entry!**
- The operation of this light fitting is only allowed if the Ex cable gland, which is designed as a test port, is installed and locked with the provided closing plug!


- Due to a high inrush current when switching on the light fitting, the number of light fittings which can be connected to a single fused circuit is limited (Possible number of light fittings per circuit breaker see section 3, Technical Data).
- All DALI dimmable light fittings have two additional terminals marked „DA“. Lines to the control terminals must be mains voltage proof.
- In case of versions for connection to central power supply systems (ZB50), the type of operation (Stand-by operation = 0; Maintained operation = 1) must be permanently marked on the type plate of the light fitting (see illustration).



Delivery status



Stand-by operation



Maintained operation

3. Technical Data

Series: nD8301 and nD8302
Explosion-proof LED High Bay for operating in hazardous areas of zones 2 and 22.

Explosion protection: Ⓔx II 3 G Ex nR IIC T4 Gc and Ⓔx II 3 D Ex tc IIIC T100 °C Dc

Certification: IBExU22ATEXB013X
IECEx IBE 22.0022X

Rated voltage: 220…240 V AC; 50/60 Hz
ZB-versions: 220…240 V AC; 50/60 Hz and 176…250 V DC

Isolation class: I

Ingress protection: IP65

Ambient temperature: -30 °C … +40 °C
-30 °C … +50 °C (nD8301 L110 H50, …L110B/T H50, …L160 H50, …L160B/T H50 and nD8302 L220 H50, …L220B/T H50, …L320 H50, …L320B/T H50 only)
-30 °C … +60 °C (nD8301 L110 H60, …L110B/T H60, …L160 H60 and nD8302 L220 H60, …L220B/T H60, …L320 H60 only)

Energy efficiency class: This light fitting contains a light source of the energy efficiency class: D

Power consumption: The power consumption of the LED is dependent on production fluctuations as well as on the service temperature.
This is why just reference values can be given as follows:
nD8301 L110…: 67 W, …L160…: 96 W, …L210…: 135 W
nD8302 L220…: 134 W, …L320…: 192 W, …L420…: 270 W

Possible number of light fittings per circuit breaker*:

Type	B 10 A	B 16 A	C 10 A	C 16 A
nD8301 L110 / L160	13	22	22	37
nD8301 L210	10	16	16	27
nD8302 L220 / L320	6	11	11	18
nD8302 L420	5	8	8	13

*) Typical values; possible deviations depending on make, cable impedance and temperature


Information on special versions on request

Cable entry: The provided Ex cable gland with thread size M25 x 1.5 only (spare-part-no. 90117 9006)
Sealing range: 8 - 17 mm (for 10 - 17 mm remove the small sealing ring)
Torques: Connection thread 3 Nm; Pressing screw 2 Nm
(Ex cable gland with closing plug = Test port)


or an Ex cable gland with an equivalent flat seal approved by the manufacturer or in accordance with national regulations for the types of protection nR and tc.

Housing bore: 25.3 mm ±0.2; wall thickness: 2.5 mm


If other cable glands are used, their operating instructions must be observed!

Test port:	Ex cable gland with closing plug (spare-part-no. 90119 9001)
Connection per terminal:	Standard versions: Ampacity: 16 A max. (At maximum current load, a cross section of 2.5 mm² is required) Clamping range: 2 x 1.0 - 4.0 mm² (solid core or stranded) Required stripping length: 10 - 11 mm For special versions, the information on the enclosed information sheet must be observed!
Fuse:	nD8301…ZB50, nD8302…ZB50 only (with fuse terminal): Miniature fuse 5x20 mm; T 2 A H; 250 V AC/DC; Type 179200; Article-No. 90294 9003
Locking:	4 screws M6x20
Operation position:	Lighting downwards
Mounting:	For mounting there are 4 threaded holes M6 on the top of the housing to insert the included threaded eye with hexagon nut. The threaded eyes must be screwed into the threaded holes by hand till stop and then they must be fixed with the hexagon nut. Optional accessories: Y-ropes, Ceiling angle, Wall angle (Wall angle mounting possible with special version light fittings only.)
Minimum distance to illuminated surface:	
Equipotential bonding:	Connection terminal for equipotential bonding on the outside of the light fitting Clamping range: 4 mm² max. Torque of terminal screw: 2 Nm max.


Dimensions:
(all measures in mm)

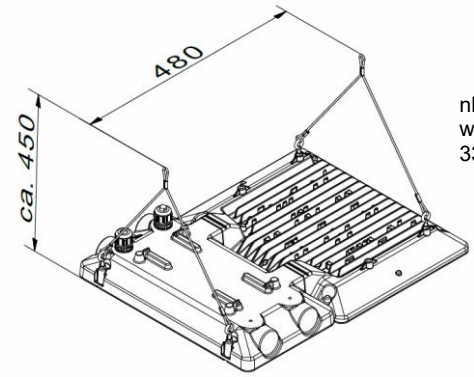


nD8301
with Y-ropes
3301/3302 Y P

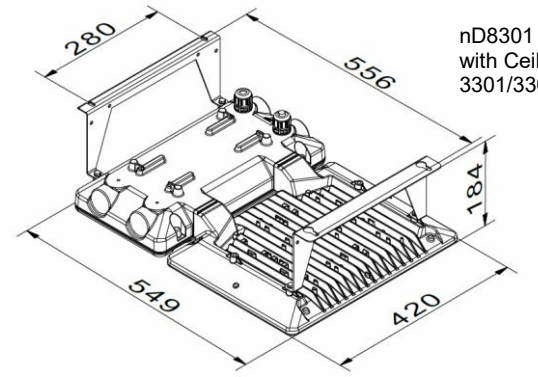


nD8301
with Ceiling angle brackets
3301/3302 DBF

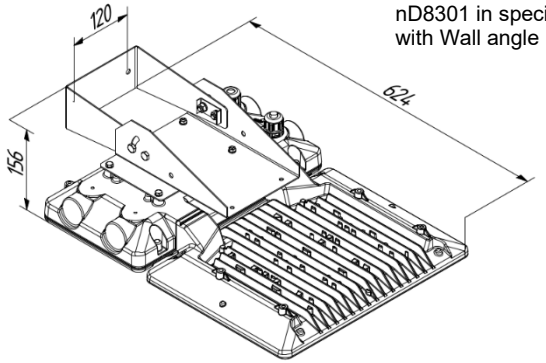


nD8301 in special version
with Wall angle bracket

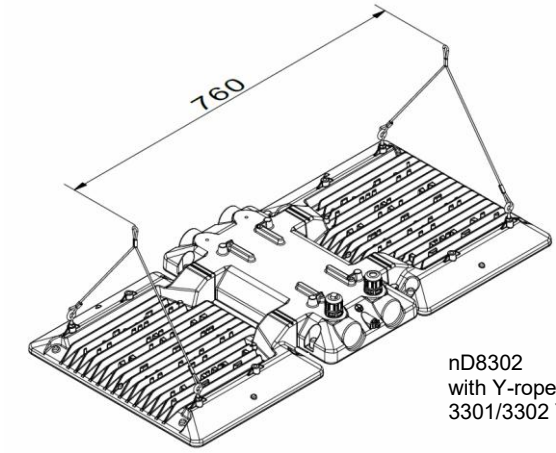

nD8302
with Y-ropes
3301/3302 Y P

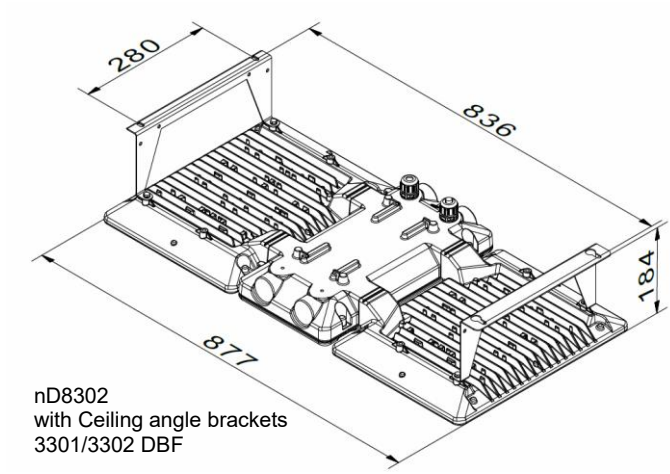


nD8302
with Ceiling angle brackets
3301/3302 DBF

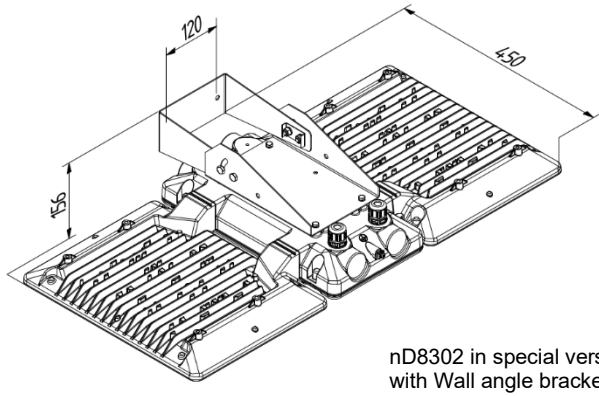



nD8302 in special version
with Wall angle bracket

Swivelling movement
of Wall angle bracket
3301 W and 3302 W:

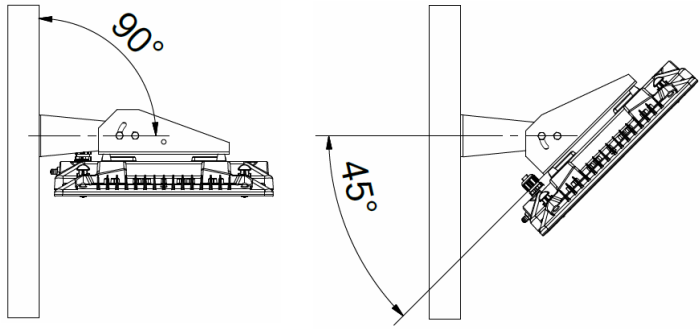

Ex cable gland, which is locked by a closing plug = Test port to run the test for restricted breathing

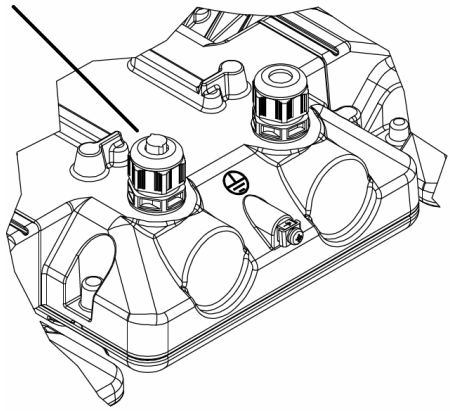

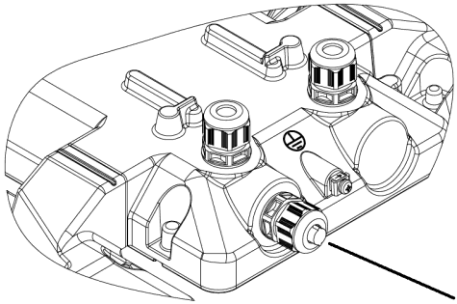

Position of test port at versions with the possibility for cable looping

4. Installation

- The safety of this light fitting is only guaranteed as long as it is operated within its assessment threshold. Installation and maintenance must be done in accordance with the respective regulations!
- The installation of explosion-proof light fittings must be done by Ex-skilled electricians only!
- In regard to the minimum and maximum admissible ambient temperature potential sources of cold and heat (e.g. direct heat or solar radiation, cooling units) have to be considered!
- The application of this light fitting in an explosive dust atmosphere is depending on the properties of the surrounding dust. Please ensure that there will be an adequate difference between the maximum surface temperature of the fitting and the glowing and the ignition temperature of the respective dust!
- The light fitting must be mounted in the instructed operation position (see section 3, Technical Data)!
- The minimum distance to the illuminated surface must be observed (see section 3, Technical Data)!
- Applying an explosion-proof breathing gland for pressure compensation is not allowed!

4.1 How to open the light fitting

- The light fitting may only be opened if it has been disconnected from the mains supply completely!
- It is allowed to open the light fitting in a non-explosive (non hazardous) atmosphere only!
- For connecting the light fitting just its device compartment has to be opened!
- The LED compartment must not be opened but for any repair work only!
- LED are sensitive electronic components. Please ensure that the LED are protected against mechanical and electrostatic attacks whenever the light fitting is open. For this reason the LED must not be touched either!

– Unscrew the four screws in the lid of the device compartment and lift the lid off.

4.2 Electrical connection

- The filling level of the connection cable should be quite high for avoiding any air penetrating the inside of the light fitting through the cable!
- **The test port for restricted breathing (Ex cable gland with closing plug, see illustration in section 3, Technical Data), must not be used for cable entry in any case!**

– Screw the Ex cable gland and the test port supplied with the fitting into the boring of the housing by using the lock nut. (Torques see section 3, Technical Data).

– After mounting the light fitting insert the connection cable through the Ex cable gland. An inlaid dust protective disc, if existing, must be removed before.

– Fasten the pressing screw of the Ex cable gland (Torque see section 3, Technical Data).

- **Outside** the light fitting appropriate measures (e.g. pull relief clips) must be taken to protect the connection cable from twist and it must be ensured that no tensile forces react on the wiring and the Ex cable gland!
- The diameter of the connection cable must correspond to the sealing range of the Ex cable gland (see section 3, Technical Data)!



- Ex cable glands that are not used for cable entry must be closed with the enclosed closure plug! An inlaid dust protective disc, if existing, must be removed before.
- The conductors must not be damaged when skinning resp. stripping the cable!
- When stripping the cable special attention needs to be paid to the correct length of the conductor end sections (see section 3, Technical Data)!

– Connect the conductors of the connection cable to the right terminals as per marking on the terminal block.



- It is important to ensure that the bare conductor is fully inserted into the terminal and that no cable insulation is clamped!

4.3 Replacing LED circuit boards and electronic gear

Replacement of the LED boards and/or of the electronic gear has been described in the separate instructions which can be found attached to the spare parts to be supplied.

4.4 How to close the light fitting

– Reput the lid of the device compartment back onto the device compartment and tighten the four screws. The screws must be tightened so far that the two housing parts are firmly on top of one another in the sector of the screws.



- After closing the light fitting please make sure that the gasket is correctly sealing it!

5. Commissioning

Before commissioning this explosion-proof lighting fitting please check and ensure that:


- the light fitting has been installed according to the regulations and in the allowed operating position.
- the Ex cable glands are securely fixed in the housing and the closing plug is installed in a proper manner (Torques see section 3, Technical Data).
- the pressing screw of every Ex cable gland is tightened with the required torque (Torques see section 3, Technical Data).
- the connection cable has been firmly installed and is not subject to any tension whatsoever.
- the bare conductor is fully inserted into the terminal and that no cable insulation is clamped.
- the light fitting is closed correctly.
- all gaskets are effective.
- the light fitting is not damaged whatsoever.



➤ The restricted breathing of the light fitting is condition for its safe operation! Therefore, prior to commissioning, check the restricted breathing in accordance with section 5.3.

5.1 Isolation measurement


For measuring the isolating resistance the test voltage must be put on between the outer conductor and the earth conductor or between the neutral conductor and the earth conductor only.

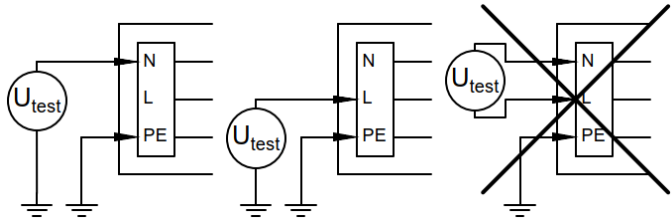


After finishing the isolation test the conductor between the mains and the light fitting must be reconnected safely. Before starting operation the connection of the neutral conductor must be safe for avoiding any damage whatsoever of the electronic control gear caused by any inadmissible excess-voltage in case of an unbalanced mains load. (see section 5.2)

5.2 Electronic gear in 3-phase-operation


The diagram shows the wiring for light fittings or light fitting groups in 3-phase circuits and with a common neutral conductor N. If the common neutral conductor is interrupted and voltage is present, then light fittings or groups of light fittings may be exposed to unacceptably high voltages and consequently the electronic gear may be destroyed.

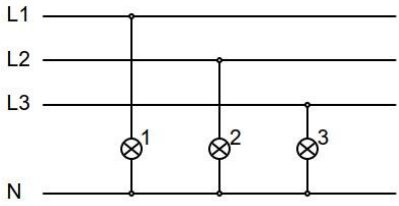

Light fittings with electronic gear

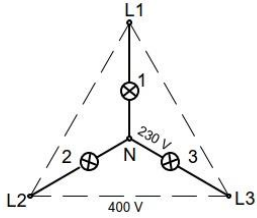

OK

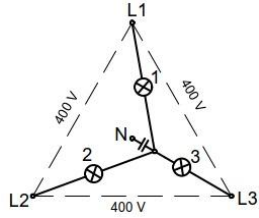

fault

5.3 Testing the restricted breathing

The test of the restricted breathing of the light fitting must be carried out after installation and at regular intervals. For this purpose, the light fitting is provided with a test port, which consists of an Ex cable gland which is locked by a closing plug.

For testing, a negative pressure is to be generated in the light fitting via the test port. Under constant temperature conditions, the vacuum must exceed a predetermined minimum value after a specified waiting time has elapsed.

According to EN/IEC 60079-15:2019, section 12.2.2.1.2, three test methods can be used:

	Method 1	Method 2	Method 3
Underpressure at the beginning of the test	3 kPa (30 mbar)	0,3 kPa (3 mbar)	0,3 kPa (3 mbar)
Waiting time	14 s	14 s	90 s
Minimum underpressure after waiting time has elapsed	2,7 kPa (27 mbar)	0,27 kPa (2,7 mbar)	0,15 kPa (1,5 mbar)



➤ After completing the test, make sure that the closing plug is inserted back into the Ex cable gland and the pressing screw is tightened properly (Torque see section 3, Technical Data).

6. Maintenance

6.1 Repair- and maintenance works

- The light fitting may only be opened if it has been disconnected from the mains supply completely!
- It is allowed to open the light fitting in a non-explosive (non hazardous) atmosphere only!
- For applications in dusty atmospheres the light fitting must be cleaned before opening!
- Ensure that no dust can get into the light fitting when it is open!
- Working on the inner parts of the light fitting is allowed in non hazardous atmosphere only!
- Replace damaged parts by original spare parts from the Adolf Schuch GmbH only!

Spare Parts:
Due to the rapid development of LED technology, LED components quickly become obsolete and are no longer available. In order to be able to determine and offer suitable components nevertheless, in addition to the complete type designation the serial number of the light fitting must be stated when enquiring about spare parts. The serial number is printed on the type plate of the light fitting – on the bottom left.
If programmed electronic gear is required as a replacement, its configuration no. printed on a label on the gear below the barcode must also be indicated.



6.2 Cleaning the light fitting

- If possible glass and housing of the light fitting shall be cleaned with water only. When using any kind of cleaning agent make sure that there is no damaging influence at all especially on the sealing material!

Pay attention to the following in case of application of this light fitting in dusty atmospheres:
Dust deposits show heat-insulating properties and thus reduce the service life of the light fitting. It is necessary to clean the fitting from dust regularly. In case the dust layer may be higher than 5 mm it must be ensured that the surface temperature of the light fitting does not exceed the maximum permissible surface temperature of the specific dust considering the thickness of the dust layer. The dust layer must not exceed 50 mm at any time.

6.3 Regular maintenance work

- Follow the instructions of section 6.1!

Explosion-proof light fittings need regular maintenance according to the national rules of the country they are installed. Especially components which are important for the Explosion Category have to be carefully checked. Therefore it must to be checked very carefully:

- glass, housing and gaskets for any kind of damages.
- effectiveness of gasket between glass resp. lid of the device compartment and housing.
- the correct installation and tightness of Ex cable glands and closing plug (Torques see section 3, Technical Data).
- all parts of plastic inside the light fitting to attend to colour change, deformation and damaging.

– the tight fit of the conductor and the condition of the cable insulation.
– that the light fitting is closed correctly and the gasket is effective.



➤ The restricted breathing of the light fitting is condition for its safe operation and must therefore be regularly checked under particular consideration of its operating conditions (see section 5.3, Testing the restricted breathing)!

EU-Konformitätserklärung
EU-Declaration of Conformity
Déclaration UE de Conformité

Bezeichnung des Betriebsmittels Name of product Nom du produit	nD 8301...ZB ; nD 8302...ZB
Beschreibung des Betriebsmittels Description of product Description du produit	Explosionsgeschützte Leuchte Explosion-proof luminaire Luminaire antidéflagrant
EG/EU-Konformitätsaussage EC/EU-Statement of Conformity Déclaration CE/UE de Conformité	IBExU 22 ATEX B013X
Relevante EU-Richtlinie Relevant EU directive Directive UE importante	2014/34/EU ATEX-Richtlinie (ABL L 96 29.03.2014 S. 309) 2014/34/EU ATEX Directive (OJ L 96 29.03.2014 S. 309) 2014/34/UE Directive ATEX (JOUE L 96 29.03.2014 S. 309)
Angewandte Normen Applied standards Normes appliquées	EN IEC 60079-0:2018/AC:2020, EN IEC 60079-15:2019, EN IEC 60079-31:2024
Normen nach Niederspannungsrichtlinie Standards according to the Low Voltage Directive Normes selon la directive basse tension	EN IEC 60598-1:2021, EN IEC 60598-2-1:2021, EN IEC 60598-2-22:2022
Relevante EU-Richtlinie Relevant EU directive Directive UE importante	2014/53/EU RED-Richtlinie (ABL L 153 22.05.2014 S. 62) 2014/53/EU RED Directive (OJ L 153 22.05.2014 S. 62) 2014/53/UE Directive RED (JOUE L 153 22.05.2014 S. 62)
Angewandte Normen Applied standards Normes appliquées	ETSI EN 300330 V2.1.1:2017
Normen nach EMV-Richtlinie Standards according to EMC Directive Normes selon la directive CEM	EN IEC 55015:2019+A11:2020, EN IEC 61000-3-2:2019+A1:2021, EN 61000-3-3:2013+A1:2019+A2:2021+A2:2021/AC:2022, EN 61547:2009, EN 301489-1 V2.2.3:2019-11, EN 301489-3 V2.1.1:2019-03
Relevante EU-Richtlinie Relevant EU directive Directive UE importante	2011/65/EU RoHS-Richtlinie (ABL L 174 01.07.2011 S. 88) 2011/65/EU RoHS-Directive (OJ L 174 01.07.2011 S. 88) 2011/65/UE Directive RoHS (JOUE L 174 01.07.2011 S. 88)
Angewandte Normen Applied standards Normes appliquées	EN IEC 63000:2018

Hiermit erklären wir in alleiniger Verantwortung, dass das oben aufgeführte Produkt mit den Anforderungen der angegebenen Richtlinien und Normen übereinstimmt.
We hereby declare in our sole responsibility that the product above complies with the requirements of the specified directives and standards.
Nous déclarons de notre seule responsabilité que le produit mentionné ci-dessus est conforme aux exigences des directives et des normes indiquées.

Adolf Schuch GmbH - Mainzer Str. 172, 67547 Worms, GERMANY

Worms, 18.02.2026
Ort und Datum
Place and date
Lieu et date

Nicolai Wolf
Geschäftsführer
Managing director
le directeur

IBExU 22 ATEX B013X-00 Teil/part/partie B/SB-00

EU-Konformitätserklärung
EU-Declaration of Conformity
Déclaration UE de Conformité

Bezeichnung des Betriebsmittels Name of product Nom du produit	nD 8301... ; nD 8302...
Beschreibung des Betriebsmittels Description of product Description du produit	Explosionsgeschützte Leuchte Explosion-proof luminaire Luminaire antidéflagrant
EG/EU-Konformitätsaussage EC/EU-Statement of Conformity Déclaration CE/UE de Conformité	IBExU 22 ATEX B013X
Relevante EU-Richtlinie Relevant EU directive Directive UE importante	2014/34/EU ATEX-Richtlinie (ABL L 96 29.03.2014 S. 309) 2014/34/EU ATEX Directive (OJ L 96 29.03.2014 S. 309) 2014/34/UE Directive ATEX (JOUE L 96 29.03.2014 S. 309)
Angewandte Normen Applied standards Normes appliquées	EN IEC 60079-0:2018/AC:2020, EN IEC 60079-15:2019, EN IEC 60079-31:2024
Normen nach Niederspannungsrichtlinie Standards according to the Low Voltage Directive Normes selon la directive basse tension	EN IEC 60598-1:2021, EN IEC 60598-2-1:2021
Relevante EU-Richtlinie Relevant EU directive Directive UE importante	2014/53/EU RED-Richtlinie (ABL L 153 22.05.2014 S. 62) 2014/53/EU RED Directive (OJ L 153 22.05.2014 S. 62) 2014/53/UE Directive RED (JOUE L 153 22.05.2014 S. 62)
Angewandte Normen Applied standards Normes appliquées	ETSI EN 300330 V2.1.1:2017
Normen nach EMV-Richtlinie Standards according to EMC Directive Normes selon la directive CEM	EN IEC 55015:2019+A11:2020, EN IEC 61000-3-2:2019+A1:2021, EN 61000-3-3:2013+A1:2019+A2:2021+A2:2021/AC:2022, EN 61547:2009, EN 301489-1 V2.2.3:2019-11, EN 301489-3 V2.1.1:2019-03
Relevante EU-Richtlinie Relevant EU directive Directive UE importante	2011/65/EU RoHS-Richtlinie (ABL L 174 01.07.2011 S. 88) 2011/65/EU RoHS-Directive (OJ L 174 01.07.2011 S. 88) 2011/65/UE Directive RoHS (JOUE L 174 01.07.2011 S. 88)
Angewandte Normen Applied standards Normes appliquées	EN IEC 63000:2018

Hiermit erklären wir in alleiniger Verantwortung, dass das oben aufgeführte Produkt mit den Anforderungen der angegebenen Richtlinien und Normen übereinstimmt.
We hereby declare in our sole responsibility that the product above complies with the requirements of the specified directives and standards.
Nous déclarons de notre seule responsabilité que le produit mentionné ci-dessus est conforme aux exigences des directives et des normes indiquées.

Adolf Schuch GmbH - Mainzer Str. 172, 67547 Worms, GERMANY

Worms, 18.02.2026
Ort und Datum
Place and date
Lieu et date

Nicolai Wolf
Geschäftsführer
Managing director
le directeur

IBExU 22 ATEX B013X-00 Teil/part/partie A/SB-00

The test certificates are ready to be loaded down from our homepage - www.schuch.de - or we shall send it on request.

Misprints, modifications and errors are excepted